

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. These preferences can be changed by using the “DISP” button, by using the Remote Touch, or at your Lexus dealer.

Customizing vehicle features


■ Changing by using the Remote Touch

- ▶ Vehicles without a navigation system

1 “Vehicle Settings” screen displayed on the Remote Touch screen.
(→P. 336)

2 Select “Vehicle Customization” on the “Vehicle Settings” screen.

“Vehicle Customization” screen will appear.

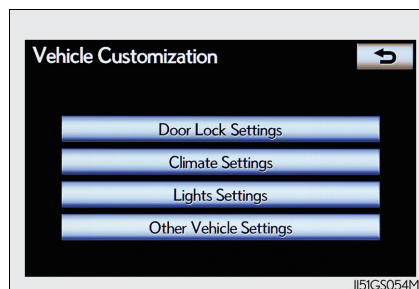

3 Choose a category displayed on the screen to display the settings.

4 Select the setting to be changed. Change each setting.

For items that can be enabled/disabled, and for items with an operating time that can be changed, select “On” or “Off”, or select the desired operating time.

For items with sensor sensitivity that can be changed, select “+” or “-” to choose the desired level, then select “OK”.

5 A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

- ▶ Vehicles with a navigation system
→Refer to “Navigation System Owner’s Manual”.
- **Changing by using the “DISP” button**
→P. 98

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.


- ① Settings that can be changed using the Remote Touch
- ② Settings that can be changed using the "DISP" button
- ③ Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, – = Not available

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|---------------------------------------|-----------------------|----------------------|-----------------------|---|---|---|
| Multi-information display (→P. 94) | "Language"*1 | "English" | "Français" (French) | – | ○ | – |
| | | | "Español" (Spanish) | – | ○ | – |
| | "Units"*1 | "miles (MPG)" | "km (km/L)" | – | ○ | – |
| | | | "km (L/100km)" | – | ○ | – |
| | "ECO lamp" | "ON (Self-lighting)" | "OFF" | – | ○ | – |
| | | | "ON (Always)" | – | ○ | – |
| | "Drive monitor" | "Outside" | "Fuel consumption" | – | ○ | – |
| | | | "Cruising range" | – | ○ | – |
| | "Tachometer Settings" | "ON (Self-changing)" | "HV Meter (Always)" | – | ○ | – |
| | | | "Tachometer (Always)" | – | ○ | – |
| | "Lamp brightness" | "Standard" | "Bright" | – | ○ | – |
| | "SPORT lamp" | "ON" | "OFF" | – | ○ | – |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|---------------------------------------|---|---|---|---|---|---|
| Multi-information display (→P. 94) | "EV driving Indicator" | "ON" | "OFF" | – | ○ | – |
| | "Default settings" | "OFF" | "ON" | – | ○ | – |
| Door lock (→P. 137, 767) | "Unlock on Second Key Turn" (Allows all doors to be unlocked by turning the mechanical key twice in the driver's door) | On (Driver's door unlocked in one step, all doors unlocked in two steps) | Off (All doors unlocked in one step) | ○ | – | ○ |
| | "Auto Lock by Speed" (All doors are automatically locked when vehicle speed is approximately 12 mph [20 km/h] or higher) | Off | On | ○ | – | ○ |
| | "Auto Lock by Shift from P" (All doors are automatically locked when shifting the shift lever to position other than P) | On | Off | ○ | – | ○ |
| | "Auto Unlock by Shift to P" (All doors are automatically unlocked when shifting the shift lever to P) | On | Off | ○ | – | ○ |
| | "Auto Unlock by Driver Door" (All doors are automatically unlocked when driver's door is opened) | Off | On | ○ | – | ○ |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|--|--|-----------------|--------------------|---|---|---|
| Smart access system with push-button start (→P. 121) and wireless remote control (→P. 134) | "Lock/Unlock Feedback-Tone" (Adjust the volume of buzzer sounds) | 5 | Off | ○ | - | ○ |
| | | | 1 to 7 | | | |
| | "Lock/Unlock Feedback-Lights" (Enable/disable the operation of the emergency flashers when the vehicle is locked or unlocked) | On | Off | ○ | - | ○ |
| | "Auto Relock Timer" (Adjust the time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked) | 60 seconds | Off | ○ | - | ○ |
| | | | 30 seconds | | | |
| | | | 120 seconds | | | |
| | Open door reminder buzzer (When locking the vehicle) | On | Off | - | - | ○ |
| Smart access system with push-button start (→P. 121) | "Access System with Elec. Key" (Smart access system with push-button start can be disabled) | On | Off | ○ | - | ○ |
| | "Select Doors to Unlock" (The doors that are unlocked using the smart access system with push-button start can be selected) | Driver's door | All the doors | ○ | - | ○ |
| | Number of consecutive door lock operations | 2 times | As many as desired | - | - | ○ |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|---|--|---|---|---|---|---|
| Wireless remote control (→P. 134) | Wireless remote control | On | Off | – | – | ○ |
| | “Remote 2-Press Unlock” (Allows all doors to be unlocked by pressing  on the electronic key twice) | On (Driver's door unlocked in one step, all doors unlocked in two steps) | Off (All doors unlocked in one step) | ○ | – | ○ |
| | Trunk unlocking operation | Press and hold (short) | One short press | – | – | ○ |
| | | | Push twice | | | |
| | | | Press and hold (long) | | | |
| | | | Off | | | |
| | Alarm (panic mode) | On | Off | – | – | ○ |
| Front seats (→P. 148) | “Driver's Seat Easy Exit” (Driver's seat movement when exiting the vehicle) | Standard | Off | ○ | – | ○ |
| | | | Partial | | | |
| | Selecting the door linking driving position memory with door unlock operation | Driver's door | All doors | – | – | ○ |
| Power windows (→P. 164) and moon roof (→P. 167) | Mechanical key linked operation | Off | On | – | – | ○ |
| | Wireless remote control linked operation | Off | On (Open only) | – | – | ○ |
| | Buzzer sounds if operated using wireless remote control | On | Off | – | – | ○ |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|--------------------------------|---|-----------------|--|---|---|---|
| Turn signal lever (→P. 205) | The number of times the turn signal lights flash automatically when the turn signal lever is moved to the first position during a lane change (After flashing the turn signal lights when turning left or right while this function is off and the turn signal lever is moved to the first position in direction of the flashing light, the turn signal lights can be selected to be flashing or off.) | 3 | 5 | — | — | ○ |
| | | | 7 | | | |
| | | | Off (the turn signal lights keep flashing if the turn signal lever is moved to the first position in direction of flashing light) | | | |
| | | | Off (the turn signal lights will be off if the turn signal lever is moved to the first position in direction of flashing light) | | | |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|---|--|-----------------------|--------------------|---|---|---|
| Automatic light control system (→P. 213) | "Headlamps-On Sensitivity" (Adjust the sensitivity of the ambient light sensor) | Standard | -2 to 2 | O | – | O |
| | "Headlamps Auto-Off Timer" (Adjust the time elapsed before the headlights automatically turn off) | 30 seconds | Off | O | – | O |
| | | | 60 seconds | | | |
| | | | 90 seconds | | | |
| | Welcome light illumination control | On | Off | – | – | O |
| Lights (→P. 213) | "Daytime Running Lights" (Daytime running lights can be disabled)*3 | On | Off | O | – | O |
| Intuitive parking assist*2 (→P. 261) | "Detection (Front)" (Detection distance of the front center sensor) | Far | Near | O | – | O |
| | "Detection (Rear)" (Detection distance of the rear center sensor) | Far | Near | O | – | O |
| | "Alert Volume" (Alert volume can be adjusted) | 3 | 1 to 5 | O | – | O |
| | "Display" (when intuitive parking assist is operating) | All sensors displayed | Display off | O | – | O |
| Automatic air conditioning system (→P. 364) | "Auto A/C Mode" (A/C Auto switch operation) | On | Off | O | – | O |
| | "Smog Sensor Sensitivity" (Exhaust gas sensor sensitivity) | Standard | -3 to 3 | O | – | O |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|---------------------------|---|-----------------|--------------------|---|---|---|
| Illumination (→P. 571) | Interior lights illumination control | On | Off | – | – | ○ |
| | “Interior Lights Off Timer” (Time elapsed before the interior lights turn off) | 15 seconds | 7.5 seconds | ○ | – | ○ |
| | | | 30 seconds | | | |
| | Operation after the power switch is turned off | On | Off | – | – | ○ |
| | Operation when the doors are unlocked | On | Off | – | – | ○ |
| | Operation when you approach the vehicle with the electronic key on your person | On | Off | – | – | ○ |
| | Footwell lighting | On | Off | – | – | ○ |
| | Outer foot lights | On | Off | – | – | ○ |
| | “Exterior Lights Off Timer” (Time elapsed before the outer foot lights turn off) | 15 seconds | Off | ○ | – | ○ |
| | | | 7.5 seconds | | | |
| | | | 30 seconds | | | |

| Item | Function | Default setting | Customized setting | ① | ② | ③ |
|----------------------------|--|-----------------|--------------------|---|---|---|
| Illumination (→P. 571) | Enable/disable operation of the outer foot lights when you approach the vehicle with the electronic key on your person | On | Off | – | – | ○ |
| | Enable/disable operation of the outer foot lights when the doors are unlocked with the power door lock switch | On | Off | – | – | ○ |
| Rear sunshade (→P. 594) | Reverse operation | On | Off | – | – | ○ |
| | Time elapsed before the reverse operation feature activates | 0.7 seconds | 0 second | – | – | ○ |
| | | | 0.9 seconds | | | |
| | | | 1.2 seconds | | | |

*1: The default setting varies according to countries.

*2: If equipped

*3: U.S.A. only

■ Vehicle customization

- When the “Auto Lock by Speed” and “Auto Lock by Shift from P” are both on, the door lock operates as follows.
 - When shifting the shift lever to any position other than P, all the doors will be locked.
 - If the vehicle is started with all the doors locked, the “Auto Lock by Speed” would not operate.
 - If the vehicle is started with any door unlocked, the “Auto Lock by Speed” will operate.
- When the smart access system with push-button start is off, the “Select Doors to Unlock” cannot be customized.
- When the doors remain closed after unlocking the doors and the “Auto Relock Timer” activates, the signals will be generated in accordance with the “Lock/Unlock Feedback-Tone” and the “Lock/Unlock Feedback-Lights” settings.

■ When customizing using the Remote Touch

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent 12-volt battery discharge, leave the hybrid system operating while customizing the features.



CAUTION

■ During customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



NOTICE

■ During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.